



ASSEMBLY INSTRUCTION



ITEM: (US16027M) SS757-LPH1-085 Simone LAF PWR Recliner w/PWR Headrest and BT Speaker

Thank you for purchasing this quality product. Be sure to unpack carefully looking for small parts which may have come loose during shipment.


Read all instruction and study the drawing carefully before starting the assembly process.

PART LIST

NO .	DESCRIPTION	SKETCH	QTY
A	Seat		1PC
B	Back Cushion		1PC

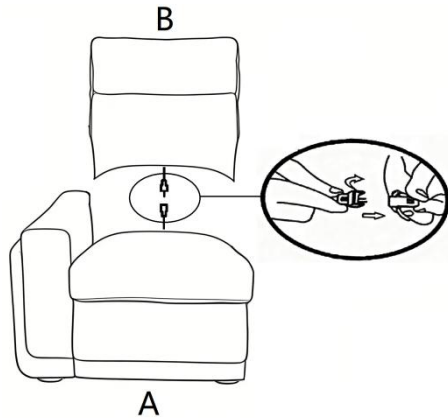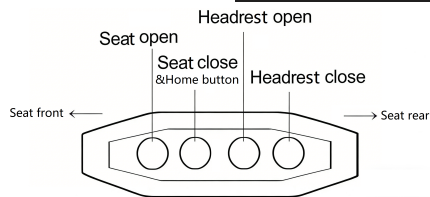

STEP 1 – connect the wire on back cushion and seat cushion.


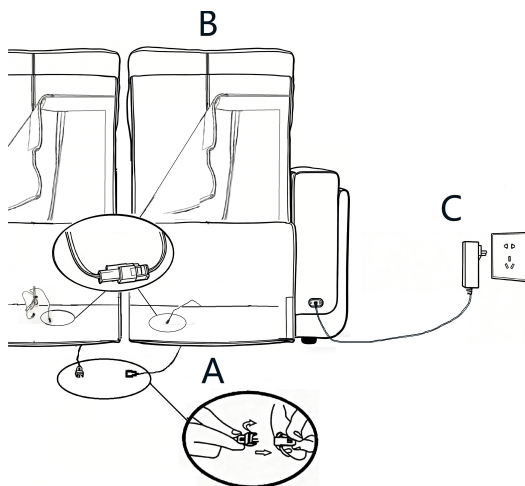


STEP 3 –Make sure the connector clips are firmly attached(refer to page 2), then plug the audio extension wire and power extension wire into their matching ports on the left and right side items, and a back up wire is tied under the seat rear for extra power if needed.


In some case, the ends of audio extension wire will need to be switched.

CAUTION

Do not allow children to play on this mechanism furniture or operate the mechanism. Leg rest folds down on closing so that child could possibly be injured. Always leave in an upright and closed position and keep hands feet clear of mechanism. Only the occupant should operate it.

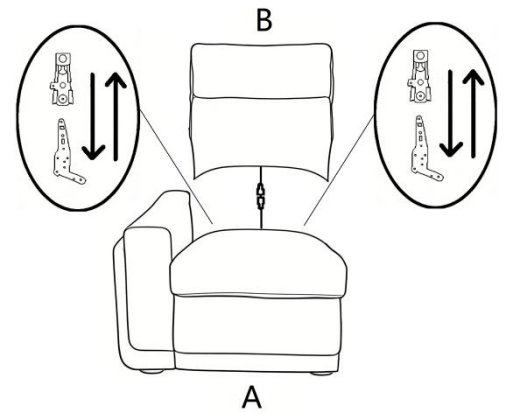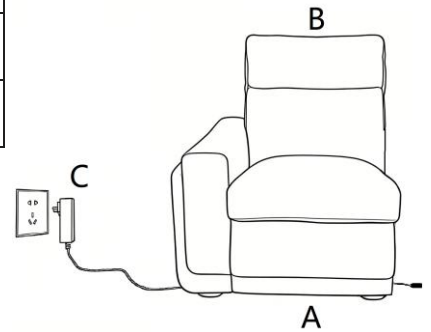

STEP 2 –Place Bracket into Sleeve and press top of back down firmly to lock your KD back in place..

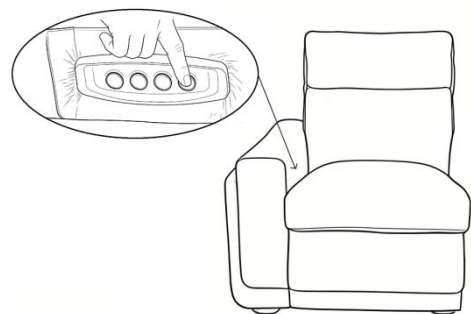


STEP 4 –Locate the hand controller on the side of seat cushion to operate the reclining function.

HOOKER[®] FURNISHINGS ASSEMBLY INSTRUCTION


ITEM: (US16027M)SS757-A-085 Simone Armless Chair
(US16027M)SS757-APPH-085 Simone Armless Recliner w/PWR Headrest
(US16027M)SS757-C-085 Simone Corner Wedge
(US16027M)SS757-CS-085 Simone Console w/Hidden Cupholders
(US16027M)SS757-LPH1-085 Simone LAF PWR Recliner w/PWR Headrest and BT Speaker
(US16027M)SS757-RPH1-085 Simone RAF PWR Recliner w/PWR Headrest and BT Speaker

CAUTION: Read the important instructions below before operating your power mechanized equipment.
Do not allow children to play on or operate this power mechanized equipment

All modulars will have connector clips to hold the pieces firmly together.

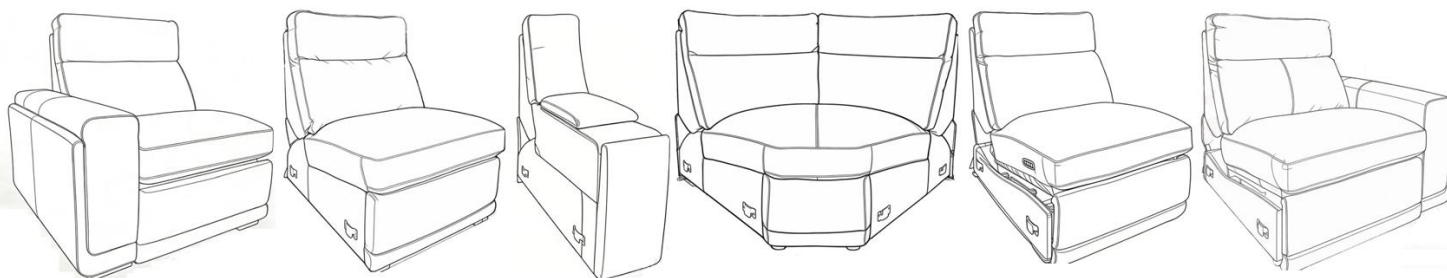

Assembly of the sectionals

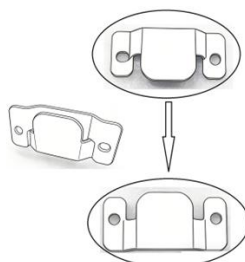

Gently lift up the unit with bracket facing down slightly and lower it onto the up facing bracket locking the sections together.

Do Not plug the power cord into power outlet until your recliner is fully assembled and in place.

NOTES:

- 1)To help prevent shock and or damage to your product only plug the power cord into a grounded outlet.
- 2)Read the operating instructions carefully before operating your power sofa.

HOOKER[®] FURNISHINGS ASSEMBLY INSTRUCTION

ITEM: (US16027M)SS757-A-085 Simone Armless Chair
(US16027M)SS757-APPH-085 Simone Armless Recliner w/PWR Headrest
(US16027M)SS757-C-085 Simone Corner Wedge
(US16027M)SS757-CS-085 Simone Console w/Hidden Cupholders
(US16027M)SS757-LPH1-085 Simone LAF PWR Recliner w/PWR Headrest and BT Speaker
(US16027M)SS757-RPH1-085 Simone RAF PWR Recliner w/PWR Headrest and BT Speaker

Your Hooker furnishing seating experience goes beyond comfort, with built-in Bluetooth audio designed for effortless enjoyment.

Step 1: Power on



Connect the power to your seating.

• **Sectional:**

Ensure the sections are powered and connected before moving to the next step.

• **Armchair:**

Once powered, you can move straight to Step 2.

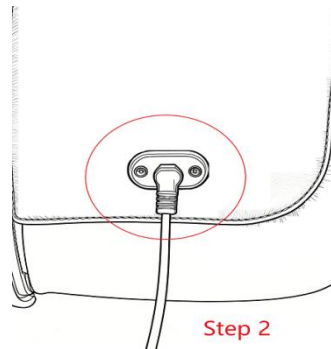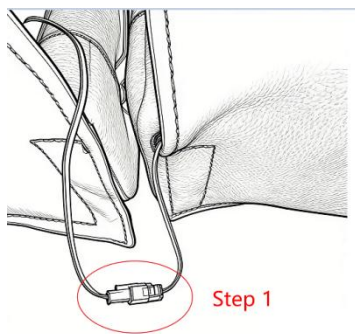

You'll hear a voice prompt indicating the speaker is ready to connect..

Step 2: Connect Your Device

Open the Bluetooth settings on your phone or tablet and select "CNDoeR" from the list of available devices. A confirmation sound will let you know when pairing is complete.

Step 3: Press Play & Relax

Stream your favourite music, podcasts, or shows directly through your sofa — no extra speakers, no clutter. Just effortless sound, built in.

Need a quick reset?

If the connection doesn't happen straight away, simply unplug the lounge, then try reconnecting via your Bluetooth settings. Sit back and enjoy sound that fits seamlessly into your lounge.

NOTES:

- 1)To help prevent shock and or damage to your product only plug the power cord into a grounded outlet.
- 2)Read the operating instructions carefully before operating your power sofa.