HOOKER® FURNISHINGS

ASSEMBLY INSTRUCTION

ITEM: (US16037M) SS757-PH1-085, SS757-PHZ1-088


Simone PWR Recliner w/PWR Headrest and BT speaker


Thank you for purchasing this quality product. Be sure to unpack carefully looking for small parts which may have come loose during shipment.


Read all instruction and study the drawing carefully before starting the assembly process.

PART LIST


NO .	DESCRIPTION	SKETCH	QTY
A	Seat		1PC
B	Back Cushion		1PC
C	Power cord		1PC

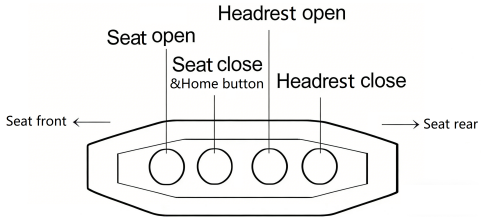

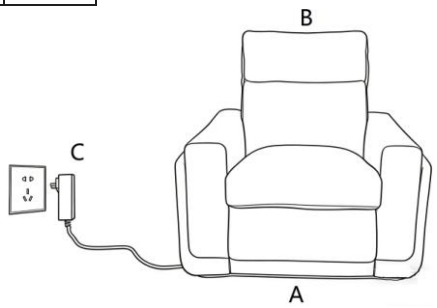


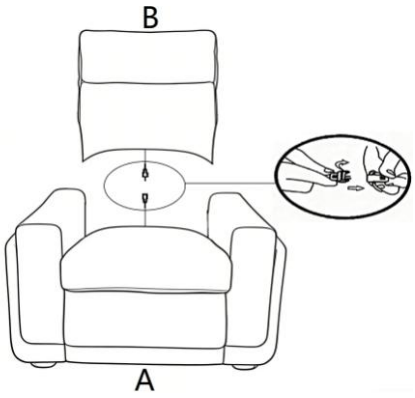


STEP 1 - Connect the wire on back cushion and seat cushion

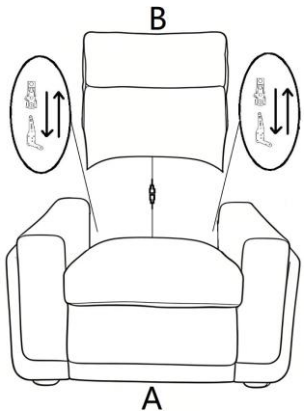

STEP 2 - Place Bracket into Sleeve and press top of back down firmly to lock your KD back in place.

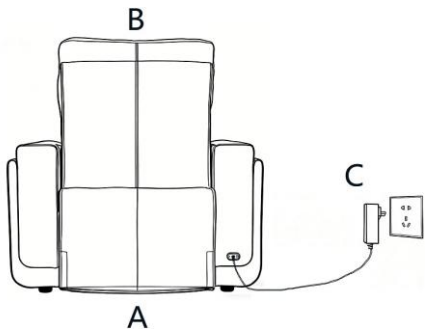

STEP 3 - Plug the transformer into the DC socket on the back of arm, then connect the other end to a wall outlet, once powered on, you will hear an audible prompt for confirm the Bluetooth system is ready.

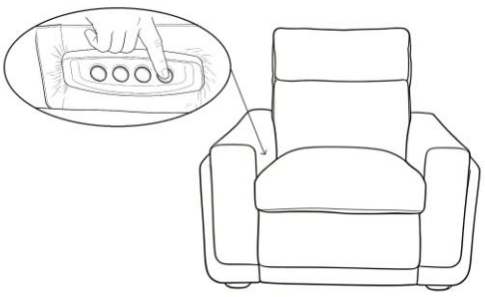

STEP 4 - Locate the hand controller on the side of seat cushion to operate the reclining function and refer to page 2 for Bluetooth pairing instruction to play music.

CAUTION

Do not allow children to play on this mechanism furniture or operate the mechanism. Leg rest folds down on closing so that child could possibly be injured. Always leave in an upright and closed position and keep hands feet clear of mechanism. Only the occupant should operate it.

HOOKER® FURNISHINGS

ASSEMBLY INSTRUCTION

ITEM: (US16037M) SS757-PH1-085 Simone PWR Recliner w/PWR Headrest and BT speaker
(US16037M) SS757-PHZ1-088 Simone PWR Recliner w/PWR Headrest and BT speaker

Your Hooker furnishing seating experience goes beyond comfort, with built-in Bluetooth audio designed for effortless enjoyment.

Step 1: Power on


Connect the power to your seating.


• **Sectional:**

Ensure the section are powered and connected before moving to the next step.

• **Armchair:**

Once powered, you can move straight to Step 2.

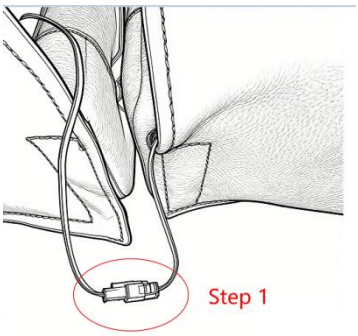

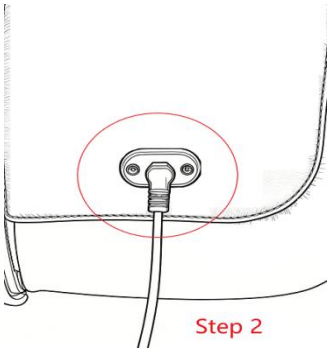

You'll hear a voice prompt indicating the speaker is ready to connect.

Step 2: Connect Your Device
Open the Bluetooth settings on your phone or tablet and select "CNDoer" from the list of available devices.
A confirmation sound will let you know when pairing is complete.

Step 3: Press Play & Relax

Stream your favourite music, podcasts, or shows directly through your sofa
— no extra speakers, no clutter. Just effortless sound, built in.

Need a quick reset?
If the connection doesn't happen straight away, simply unplug the lounge,
then try reconnecting via your Bluetooth settings.
Sit back and enjoy sound that fits seamlessly into your lounge.

NOTES:

1)To help prevent shock and or damage to your product only plug the power cord into a grounded outlet.
2)Read the operating instructions carefully before operating your power sofa.