
HOOKER FURNISHINGS

ASSEMBLY INSTRUCTION


ITEM: SS499-PH3-086 Glover PWR Reclining Sofa w/PWR Headrest

Thank you for purchasing this quality product. Be sure to unpack carefully looking for small parts which may have come loose during shipment.
Read all instruction and study the drawing carefully before starting the assembly process .

	Description	Sketch	Quantity
A	Front leg		4
B	Plastic leg		6
C	Wall plug transformer		1

Step 1: Flip the sofa upside down. Locate the power transformer secured to the internal mechanism, together with 4 front legs and 6 plastic legs bundled alongside it.

Step 2: Insert the front legs (A) and plastic legs (B) into the hole. Use hand to tighten the leg clockwise until secure.

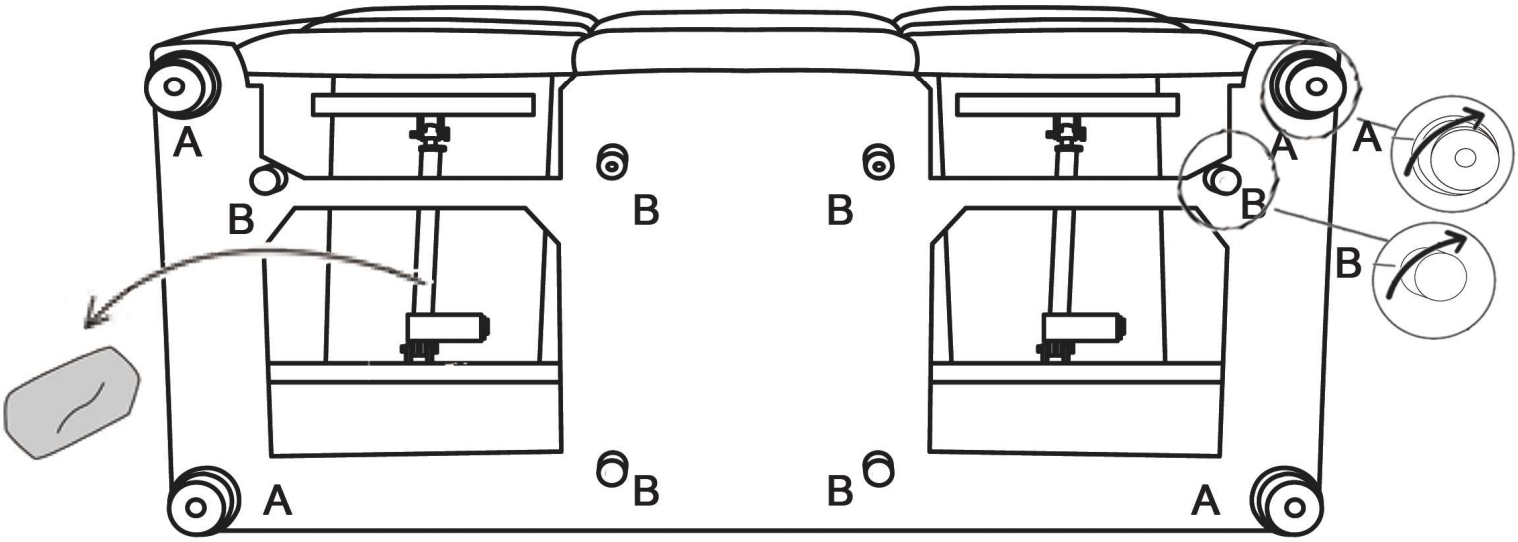

CAUTION
Do not allow children to play on this mechanism furniture or operate the mechanism. Leg rest folds down on closing so that child could possibly be injured. Always leave in an upright and closed position and keep hands feet clear of mechanism. Only the occupant should operate it.


HOOKER FURNISHINGS


ASSEMBLY INSTRUCTION

ITEM: SS499-PH3-086 Glover PWR Reclining Sofa w/PWR Headrest


Thank you for purchasing this quality product. Be sure to unpack carefully looking for small parts which may have come loose during shipment.
Read all instruction and study the drawing carefully before starting the assembly process .


Step 3: Connect the power plug to the sofa

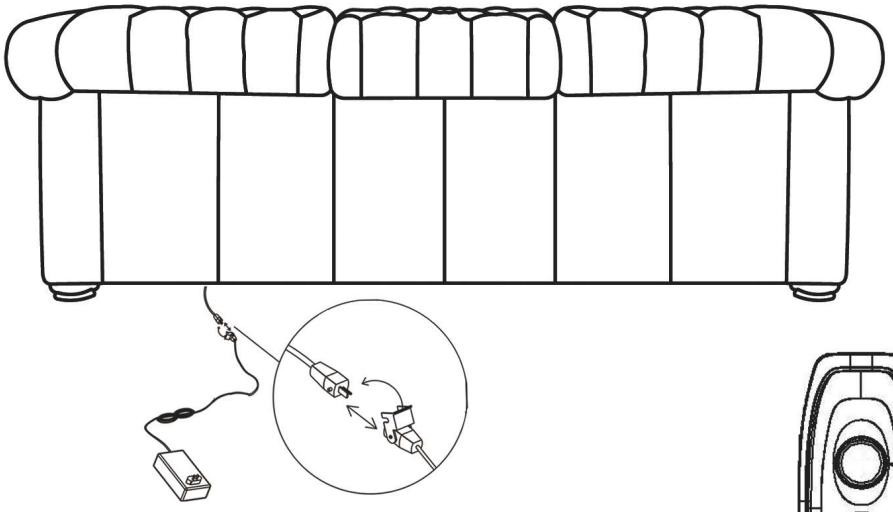


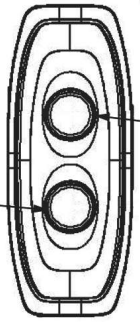

CAUTION: During seat mechanism operation, the headrest adjustment range is limited to the halfway position. Lowering it beyond this point will result in severe damage to the headrest mechanism.

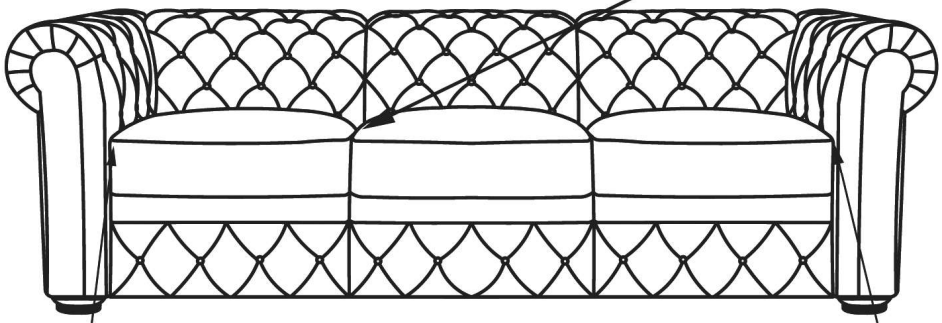

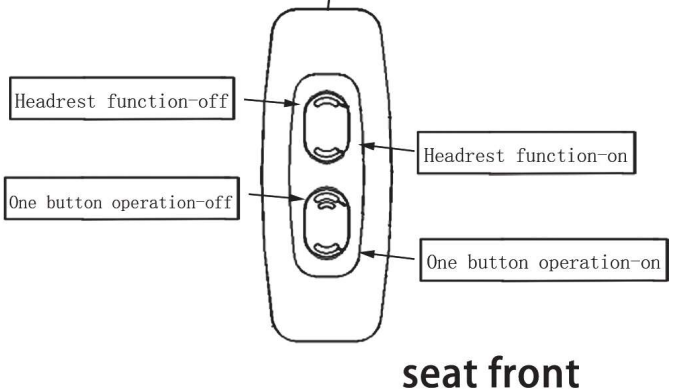

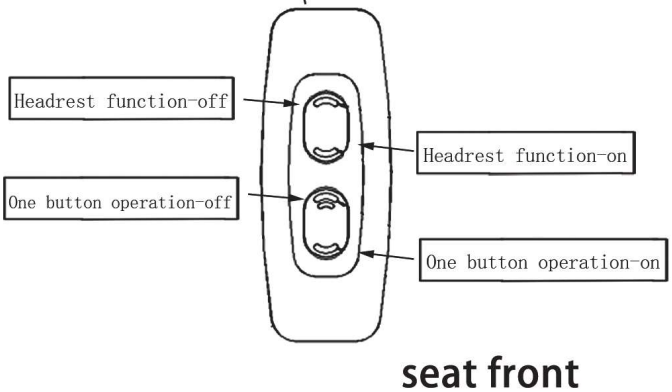

CAUTION

Do not allow children to play on this mechanism furniture or operate the mechanism. Leg rest folds down on closing so that child could possibly be injured. Always leave in an upright and closed position and keep hands feet clear of mechanism. Only the occupant should operate it.