
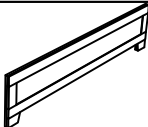






ASSEMBLY INSTRUCTION FOR ACME FURNITURE





MODEL # BD04142Q1/BD04142Q2


Thank you for purchasing the quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Separate, identify and count all parts and metal hardware. Compare with all parts list to be sure all parts are present. If any part(s) are missing or damaged, please contact your local furniture dealer. For efficient and speedy service, please indicate the model number and code letter of parts(s) needed.

Do not fully tighten screws until fully assembled

COMPONENT PARTS		
DESCRIPTION	PART NAME	Q'TY (PCS)
①	HEADBOARD 	1
②	FOOTBOARD 	1
③	HEADBOARD LEG 	2
④	BED SLATS 	4
⑤	BED SLATS SUPPORT 	4
⑥	SIDE RAIL 	2

HARDWARE REQUIRED (BOX OF HEADBOARD)

- (A)  BOLT 1/4" x 1 9/16" - 4 PCS
- (B)  SPRING WASHER 1/4" - 4 PCS
- (C)  FLAT WASHER 1/4" - 4 PCS
- (D)  ALLEN KEY M4 x 2 9/16 - 1 PC
- (E)  ALLEN KEY M5 x 2 9/16 - 1 PC
- (F)  FLATHEAD CHIPBOARD SCREW 5/32" x 1 2/8" - 16 PCS

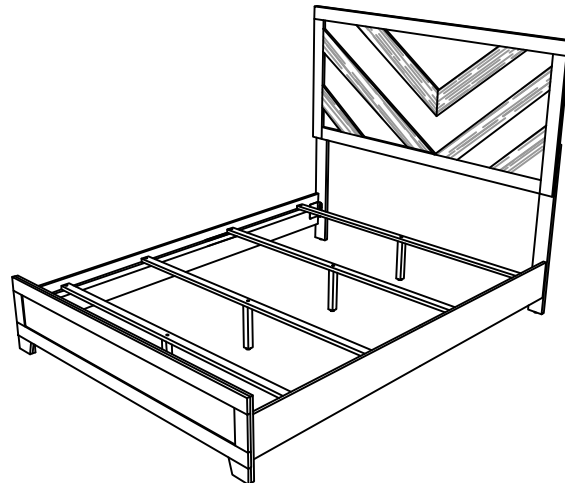


Attention:

*** Some number parts listed in the instruction sheet may not be in parts bags as they already be assembled. Carefully check parts and packing materials prior to ordering replacements.

How to assemble:


Step 1:

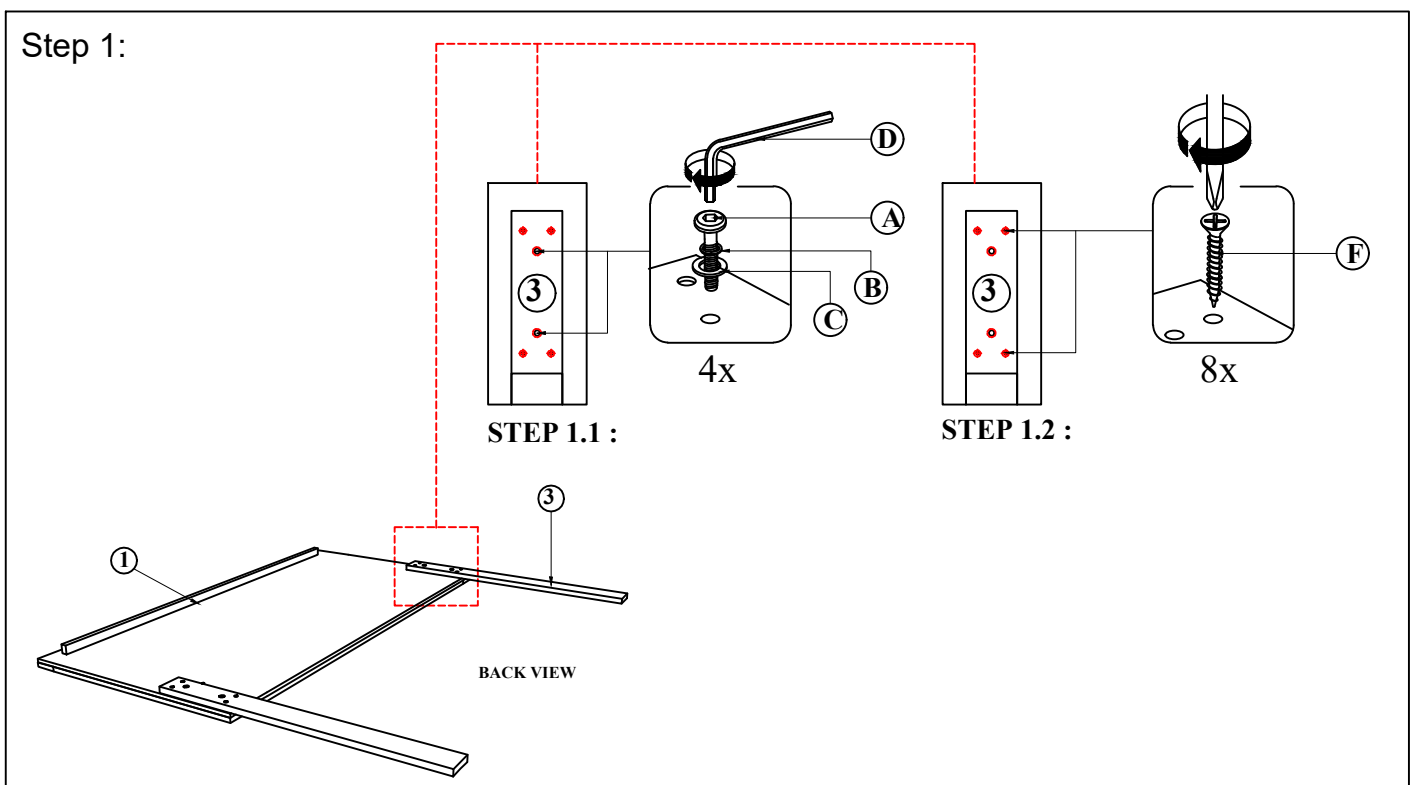

How to assemble:

Step 2:


STEP 2.2 :

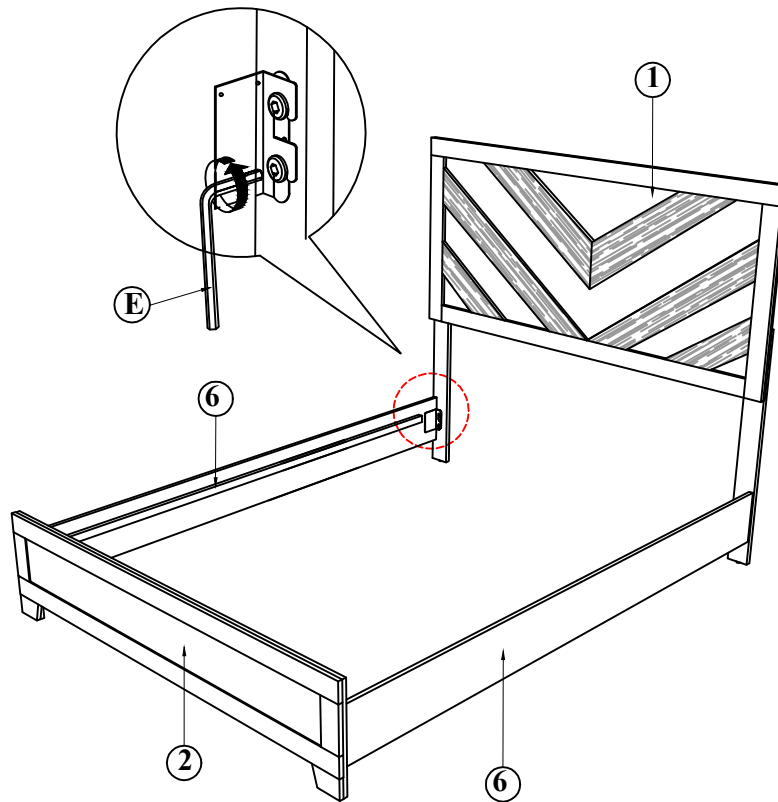

Step 3:
COMPLETE

STEP 3.2 :

STEP 3.1 :

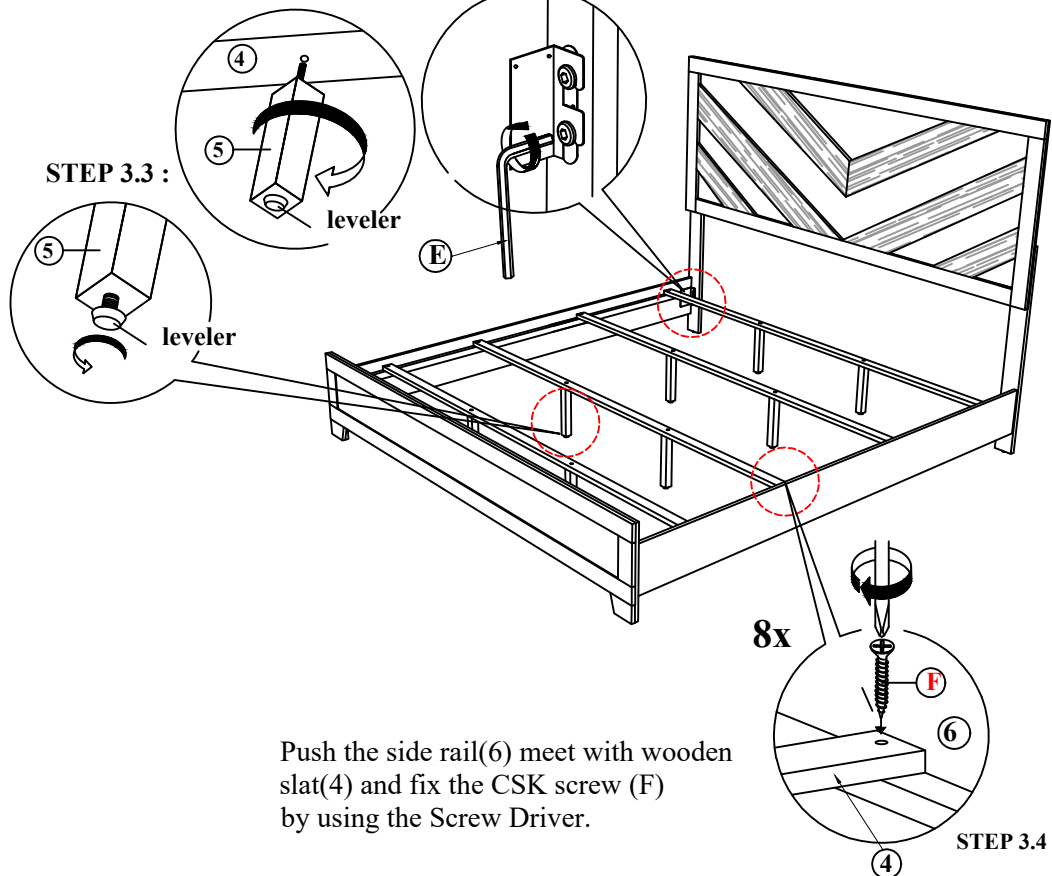

Push the side rail(6) meet with wooden slat(4) and fix the CSK screw (F) by using the Screw Driver.