

PALECEK®

601 PARR BOULEVARD | RICHMOND | CA 94801

MOUNTING INSTRUCTIONS

Glacier Wall Shelf 24" 112105





These instructions are provided for your convenience. It is very important that they are read carefully and completely before beginning installation of this item.

Tools Needed: Drill, Philip head screw bit, Measuring tape, Hammer, Bubble Level, and Pencil

Parts List:

- A) Wall Decor x 1pc.
- B) Metal Cleat x 4pcs.
- C) Wall Screw x 8pcs.
- D) Wall Anchor x 8pcs.

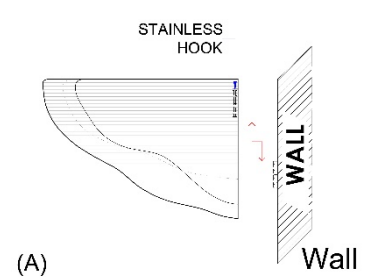


(A) Side View of cleat engagement


To Assemble

1. Remove all parts and hardware from the box along with any plastic protective packaging. Do not discard contents until after assembly is complete to avoid accidentally discarding small parts or hardware.
2. Place components on a non-scratching surface.
3. Determine the desired orientation of the Wall Shelf. Wall Shelf is equipped with two (2) Metal Cleats for hanging.
NOTE: Make sure the place where the wall shelf will be attached is leveled before attaching the metal hooks.
4. Using the guide sheet provided, place it in the desired wall location. Use a bubble leveler to ensure level positioning. Stick the guide sheet into the wall.
5. Using the drill, pre-drill holes at marked locations.
NOTE: If Wall Shelf location will be installed in sheet rock or masonry, use appropriate drill bit size to accommodate wall anchors at locations between wall studs. Using a hammer, gently tap anchors into the holes until they are flush with the wall. Anchors provided are for sheet rock. For masonry anchors, consult your local hardware store.
6. Remove the guide sheet and place Wall Anchors on hole locations, then place the Metal Cleats and insert screws accordingly.


7. Lift the Wall Shelf and align the Metal Cleats, then slide downwards firmly until they engage.

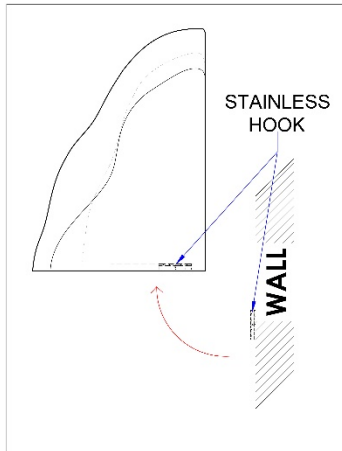

STEP 1:
Rotate the Wall Shelf to determine
The right position.

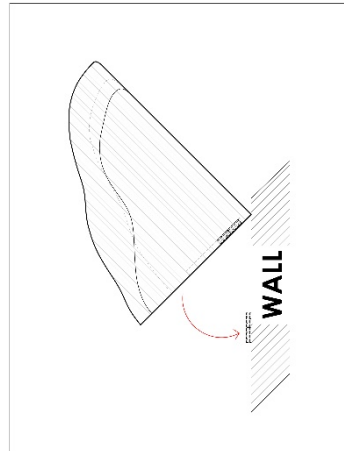

STEP 2:
If the position is determined,
slowly rotate back the Wall Shelf
into the wall.

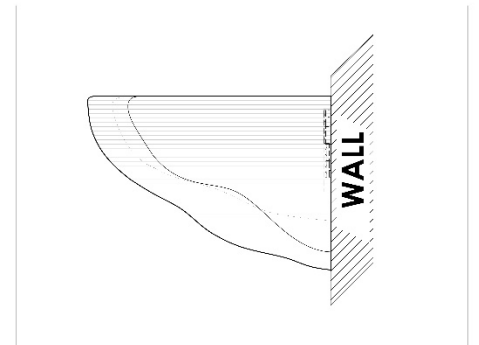

STEP 3:
Slide downwards until they engaged.

8. Installation is complete.

Care Instruction: Wipe with a soft dry cloth. Do not use abrasive cleaners.

