


PALECEK®

601 PARR BLVD. RICHMOND, CA 94801

MOUNTING INSTRUCTIONS

150203 WHITNEY RATTAN WALL DÉCOR


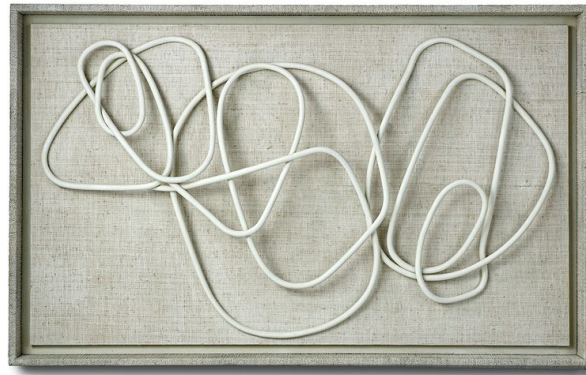


These instructions are provided for your convenience. It is very important that they are read carefully and completely before beginning installation of this item.

Tools Needed: Drill, Philip head screw bit, Measuring tape, Hammer, Bubble Level, and Pencil

Parts List:

- A) Wall Decor x 1pc.
- B) 25"L Female Wood Cleat x 1pc.
- C) Wall Screw x 5pcs.
- D) Wall Anchor x 5pcs.

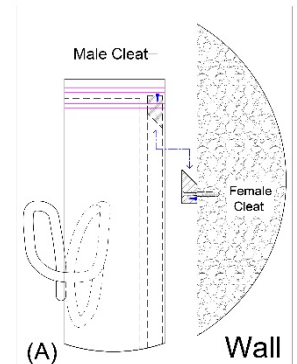

Side View of cleat engagement

To Assemble

1. Remove all parts and hardware from the box along with any plastic protective packaging. Do not discard contents until after assembly is complete to avoid accidentally discarding small parts or hardware.
2. Place components on a non-scratching surface.
3. Determine the desired orientation of the Wall Decor. Wall Decor is equipped with four (4) Male Wood Cleats for hanging.
4. Using the Female Wood Cleat, position cleat on wall in desired location and mark the hole locations on the wall with pencil.
NOTE: It is strongly recommended to install cleat with screws attaching directly into wall studs.
5. Use bubble level to ensure level positioning.
6. Using the drill, pre-drill holes at marked locations.
NOTE: If Wall Decor location will be installed in sheet rock or masonry, use appropriate drill bit size to accommodate wall anchors at locations between wall studs. Using a hammer, gently tap anchors into the holes until they are flush with the wall.
Anchors provided are for sheet rock. For masonry anchors, consult your local hardware store.
7. Place Female Wood Cleat over hole locations and insert screws accordingly.
8. Tighten screws firmly. Do not over tighten.
9. Lift the Wall Decor, align the Male and Female Wood Cleats, and then slide downwards firmly until cleats engage.
10. Installation is complete.

Care Instruction: Dust with a soft, dry cloth. Do not use abrasive cleaners