

PALECEK™

601 PARR BOULEVARD, RICHMOND, CA 94801

WOODSIDE BED ASSEMBLY INSTRUCTIONS

These instructions are provided for your convenience. It is very important that they are read carefully and completely before beginning installation of this item. (Applies to items 762001, 769601, 769603, 769701, 769703)

PARTS:


- A. Headboard x1
- B. Foot rail x1
- C. Left side rail x1
- D. Right side rail x1
- E. Center support rail x1
- F. Bed slats x5
- G. Machine bolts x2




TOOLS NEEDED:

1. Phillips head screw driver (not included). ITEM 7697-01


TO ASSEMBLE:

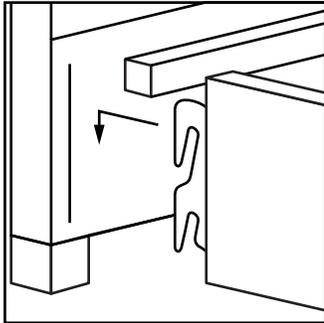


STEP 1:
Insert hooks from **Left Side Rail** into **Left Headboard slot**.

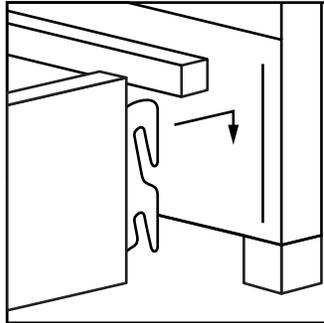


STEP 2:
Insert hooks from **Right Side Rail** into **Right Headboard slot**.

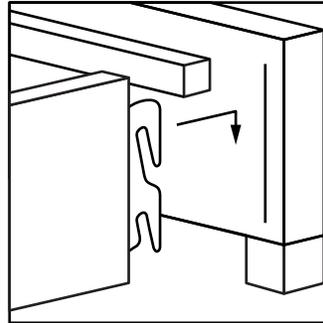


STEP 3:
Insert hooks from **Left Side Rail** into **Left Footboard slot**.

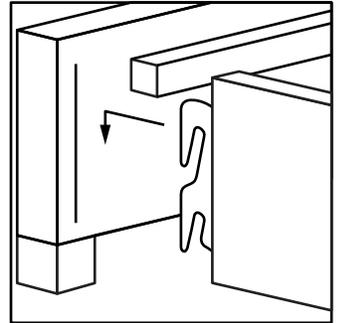


STEP 4:
Insert hooks from **Right Side Rail** into **Right Footboard slot**.

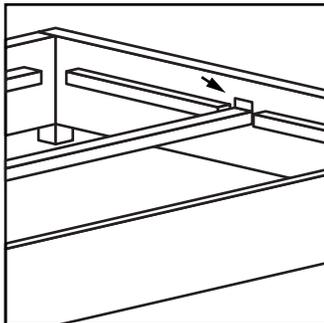

STEP 5:
Attach **Center Slat Support** to **Headboard** and **Footboard**, using provided bolts.

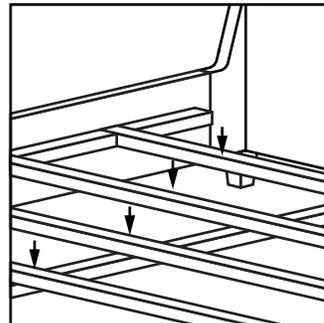

STEP 6:
Insert **Bed Slats** into **Side Rails**.

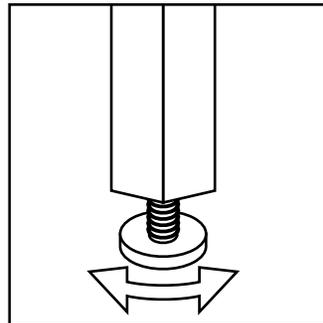

STEP 7:
Adjust center support levelers to make contact with floor.
Assembly complete.

CARE: Dust with a soft dry cloth. Do not use cleaning solutions or abrasives. Clean with mild soap and water on damp cloth.