

ASSEMBLY INSTRUCTION

ITEM: 6820-90952-83 5/0 Leather Uph Footboard
6820-90968-83 6/0-6/6 Leather Uph Footboard

Thank you for purchasing this quality product. Be sure to unpack carefully looking for small parts which may have come loose during shipment.


Read all instruction and study the drawing carefully before starting the assembly process.

HARDWARE LIST				
NO.	DRAWING	DESCRIPTION	SIZE	Q'TY
A		Allen Wrench	73*29*5mm	1 PC
B		Bolt	5/16*65mm	4 PCS
C		Lock Washer	5/16"	4 PCS
D		Flat Washer	5/16*22mm	4 PCS

PARTS LIST			
NO.	DRAWING	DESCRIPTION	Q'TY
1		Footboard	1 PC
2		Left Foot	1 PC
3		Right Foot	1 PC

STEP 1:

Attach Left Foot(2) and Right Foot(3) to bottom of Footboard(1).

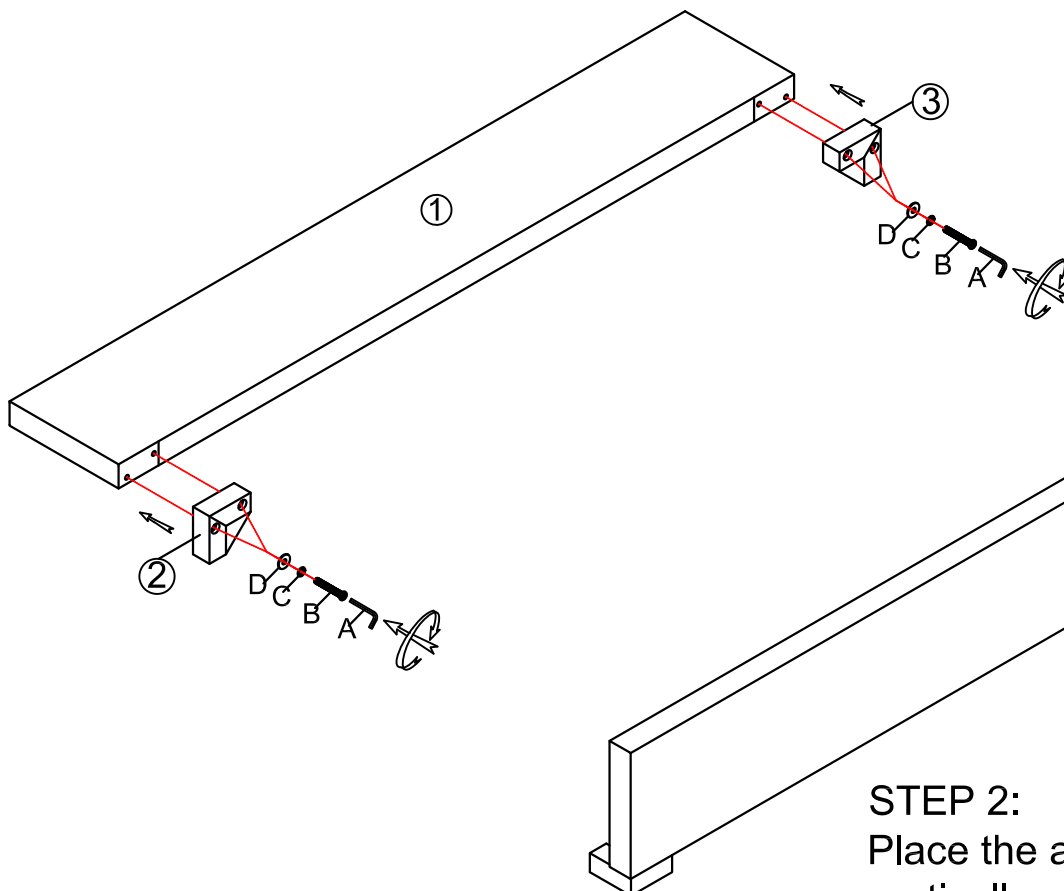

STEP 2:

Place the assembled footboard vertically.