



Liberty Furniture
INDUSTRIES, INC

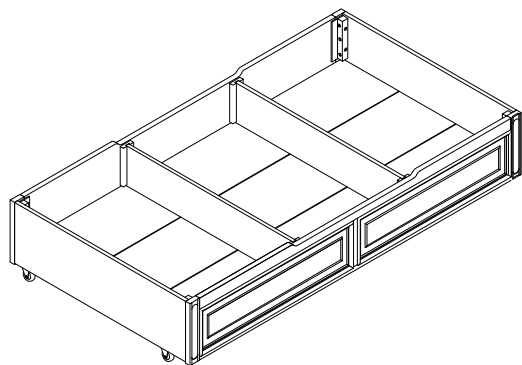
ASSEMBLY INSTRUCTION

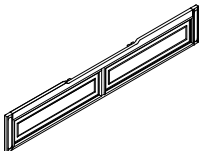
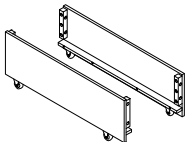

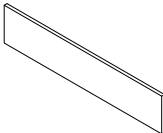
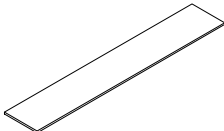
DESCRIPTION: TWIN TRUNDLE UNIT


Item#: 244 - BR11T

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Identify and count all parts and compare with the parts List Below:

PART LIST:




① 	② 		
FRONT /BACK TRUNDLE BED : 2PCS	SIDE TRUNDLE BED : 2PCS		
③ 	④ 	⑤ 	
SLAT : 1PC	PARTITION: 2PCS	COMPLETE BOTTOM PANEL : 3PCS	
⑥			
HARDWARE LIST			
NO.	Drawing	Description	Q'ty
A		Bolt Φ5/16"x 2"	8pcs
B		Flat washer (Ø5/16"x19mm)	8pcs
C		Spring washer (Ø5/16")	8pcs
D		Allen wrench(5mm)	1pc

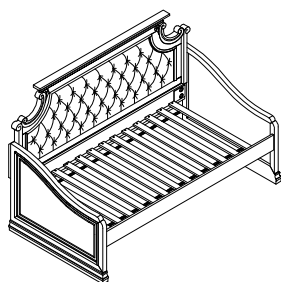


DAY BED

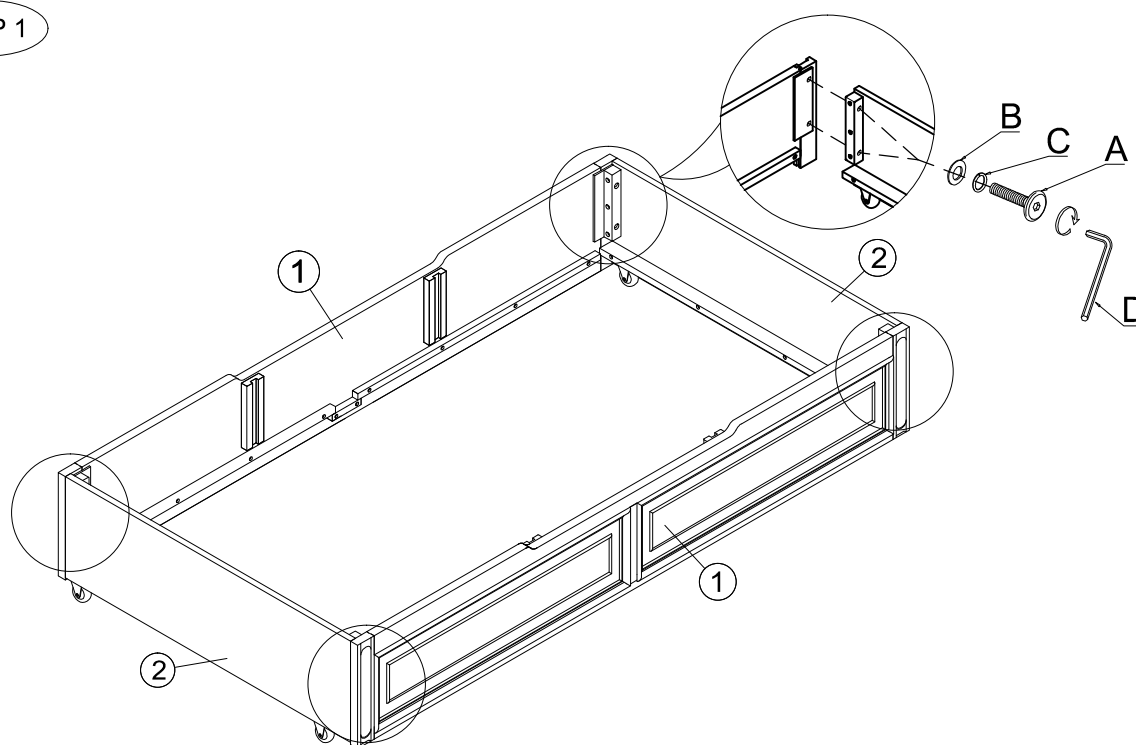
STEP 1



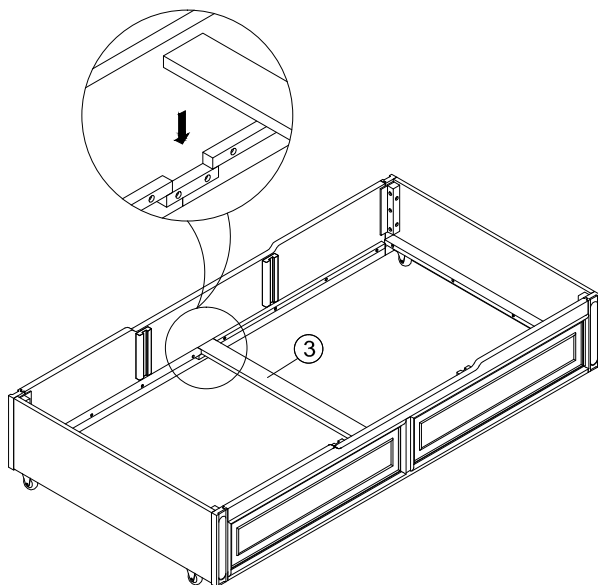
STEP 2



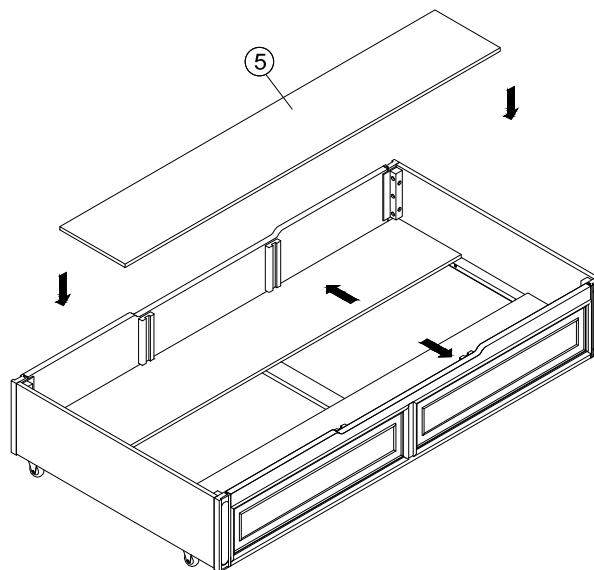
STEP 3



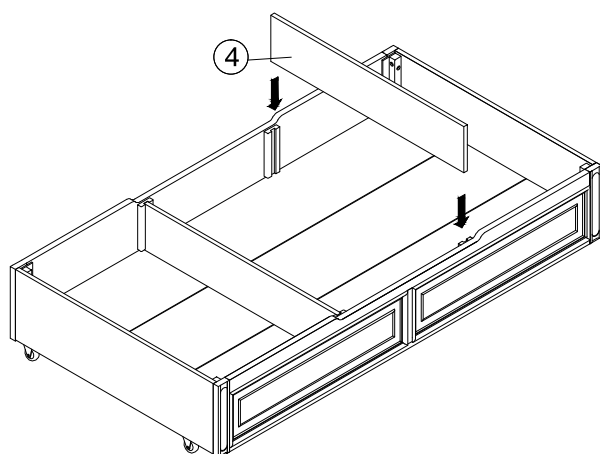STEP 4



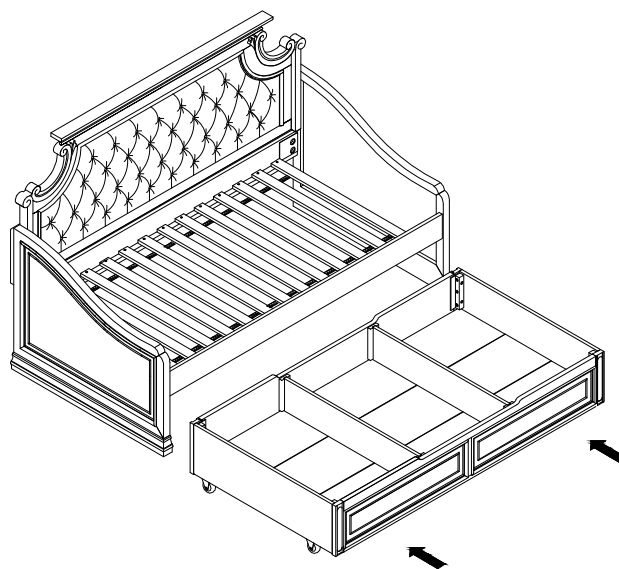STEP 5



CLEANING INSTRUCTION

Clean the Twin Trundle Unit surface with a furniture polish and a soft cloth.



Liberty Furniture
INDUSTRIES, INC

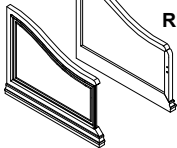


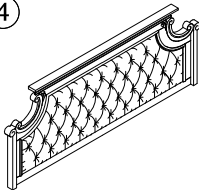

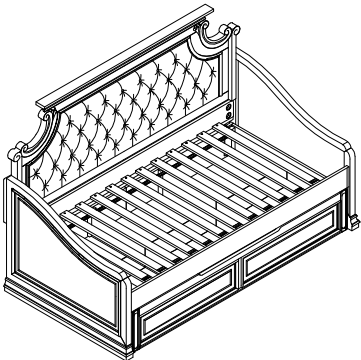
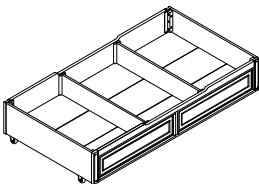
ASSEMBLY INSTRUCTION

DESCRIPTION: TWIN DAY BED HB & FB
DAYBED SIDE RAILS
DAYBED UPH BACK
TWIN DAYBED SLAT ROLL
TWIN TRUNDLE UNIT


Item#: 244 - BR09HF / BR09R / BR09HUB / BR09S / BR11T

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Identify and count all parts and compare with the parts List Below:


PART LIST:

① LEFT RIGHT  HEADBOARD - FOOTBOARD: 2PCS	②  SIDE RAIL : 2PCS	③  SLATS ROLL: 1SET	④  UPH BACK: 1PC	⑤  WOOD SUPPORTS: 2PCS																																								
		⑥ HARDWARE LIST <table><tr><th>NO.</th><th>Drawing</th><th>Description</th><th>Q'ty</th></tr><tr><td>A</td><td></td><td>Threaded Bolt Ø5/16" X2-3/4"</td><td>8pcs</td></tr><tr><td>B</td><td></td><td>Bolt Ø5/16"x 1-3/4"</td><td>12pcs</td></tr><tr><td>C</td><td></td><td>Flat washer (Ø5/16"x19mm)</td><td>12pcs</td></tr><tr><td>D</td><td></td><td>Spring washer (Ø5/16")</td><td>12pcs</td></tr><tr><td>E</td><td></td><td>Hex Nut (Ø5/16")</td><td>8pc</td></tr><tr><td>F</td><td></td><td>Wood screw Ø8 x 1"</td><td>26pcs</td></tr><tr><td>G</td><td></td><td>Ø5/16" Wrench(12mm)</td><td>1pc</td></tr><tr><td>H</td><td></td><td>Allen wrench(5mm)</td><td>1cs</td></tr><tr><td>I</td><td></td><td>Ø5/16" Half Round Washer</td><td>8pc</td></tr></table>			NO.	Drawing	Description	Q'ty	A		Threaded Bolt Ø5/16" X2-3/4"	8pcs	B		Bolt Ø5/16"x 1-3/4"	12pcs	C		Flat washer (Ø5/16"x19mm)	12pcs	D		Spring washer (Ø5/16")	12pcs	E		Hex Nut (Ø5/16")	8pc	F		Wood screw Ø8 x 1"	26pcs	G		Ø5/16" Wrench(12mm)	1pc	H		Allen wrench(5mm)	1cs	I		Ø5/16" Half Round Washer	8pc
NO.	Drawing	Description	Q'ty																																									
A		Threaded Bolt Ø5/16" X2-3/4"	8pcs																																									
B		Bolt Ø5/16"x 1-3/4"	12pcs																																									
C		Flat washer (Ø5/16"x19mm)	12pcs																																									
D		Spring washer (Ø5/16")	12pcs																																									
E		Hex Nut (Ø5/16")	8pc																																									
F		Wood screw Ø8 x 1"	26pcs																																									
G		Ø5/16" Wrench(12mm)	1pc																																									
H		Allen wrench(5mm)	1cs																																									
I		Ø5/16" Half Round Washer	8pc																																									
		TWIN TRUNDLE UNIT 																																										

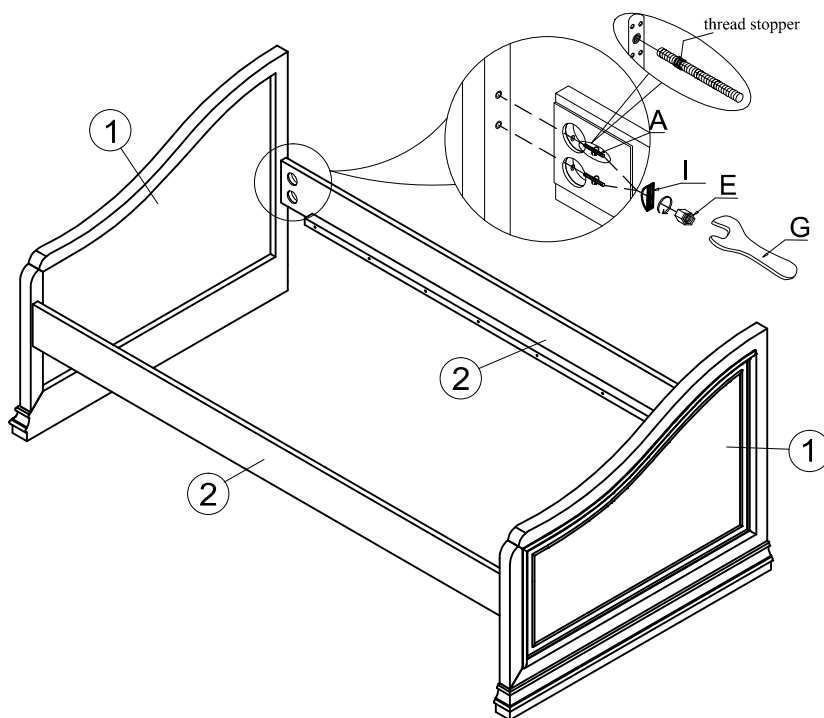
STEP 1



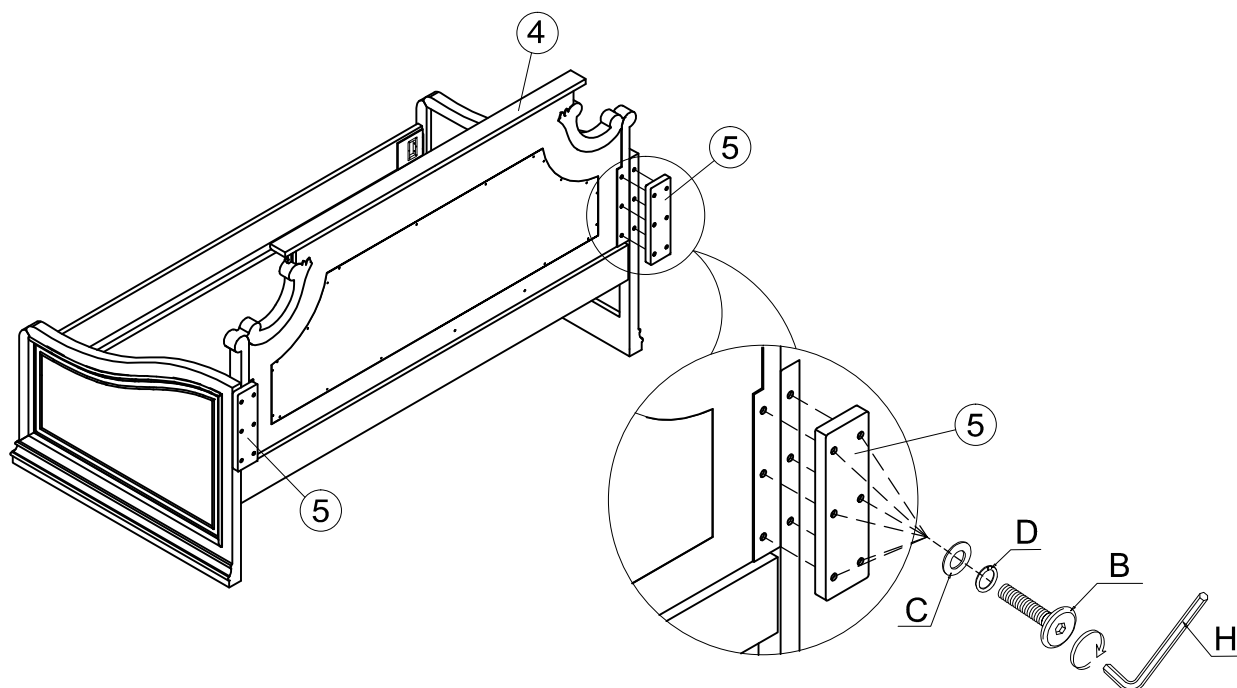
STEP 2



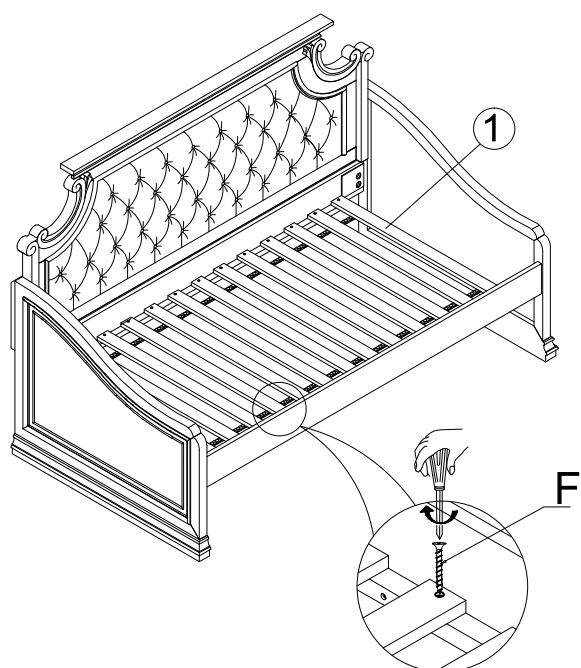STEP 3



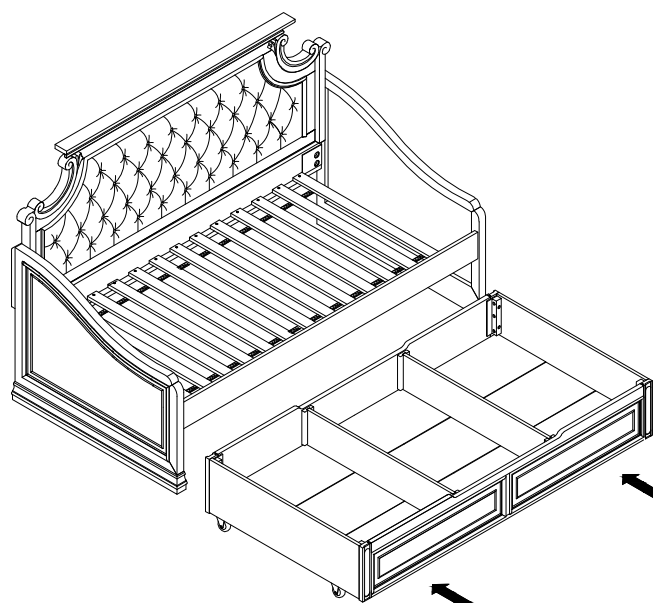STEP 4



CLEANING INSTRUCTION

Clean the Day Bed surface with a furniture polish and a soft cloth.