

BUTLER

Assembly Instructions
Style Number 1218107

SPECIALTY COMPANY
8200 SOUTH CHICAGO AVE., CHICAGO, IL 60617

PACKAGED


- | | |
|--------------------|-----------------------|
| (A) 1 - Chair body | (E) 8 - Spring washer |
| (B) 4 - Leg | (F) 8 - Flat washer |
| (C) 1 - Allen key | |
| (D) 4 - Hex bolt | |

Read all instructions before starting assembly.

Step #1 Check all the components listed in "packaged" are included. Carefully lay the Chair body(A) upside down on a flat and protected work surface being careful not to scratch the finish.

Step #2 Attach the Legs (B) to the Chair Body(A) with Allen key(C), Hex bolts(D), Spring washer(E) and Flat washer(F), then tighten the Hex bolts(D) with the Allen key(C).

Step #3 Turn the assembled unit over.

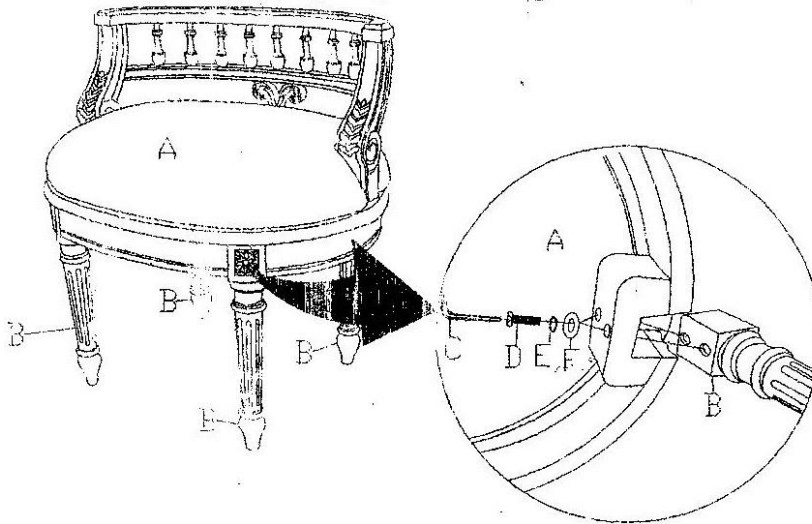

(* **Caution: DO NOT OVERTIGHTEN.**

In any correspondence regarding this product, please include the complete Butler identification number located on the underside of the product.

We hope this Stool will be a useful and decorative addition to your home for years to come.

Copyright © Butler Specialty Company, 12/07